



# **STORER BLAST CHILLER**

## **OPERATING INSTRUCTIONS**

### **MANUAL OPERATION**

- 1 Carefully load product taking care to avoid contact with the evaporators and Cold Room sides.
- 2 Insert temperature probe into product at centre of load.
- 3 Ensure both exit and entry doors are properly closed.
- 4 Refer to control panel:-
  - i) Turn master switch to 'on'.
  - ii) Turn refrigeration switch to 'on' (this will activate the system).
  - iii) The room temperature indicates air temperature in the Cold Room and will initially be lower than the product temperature.
  - iv) The product temperature shows the probe temperature and will initially be higher than the room temperature.
- 5 During the refrigeration cycle the room temperature and product temperature should start to coincide with each other.
- 6 The system is governed by the product temperature and is designed to cool and maintain the product at 2°C.
- 7 When the probe temperature and product temperature both read approximately 2°C the cycle is complete.
- 8 Remove the product into storage in the main Cold Room.